



You have these conditions:


Existing
Doors

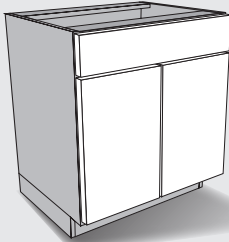

Frameless
Cabinets


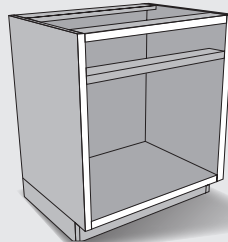


End Panel
5/8" or 3/4" Thick

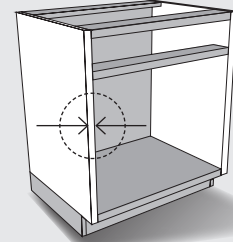

Determine your door & drawer front sizes:

1. Download our helpful form to record your information the same way our website will ask for it. [Measurement Form](#)
2. Measure your end panel thickness. It will be 5/8" (0.625") or 3/4" (0.75").
3. Measure your existing doors and drawer fronts to the closest 1/16" (0.0625"). Measure width first, then height.

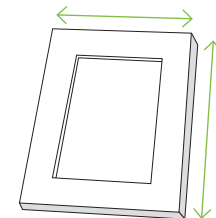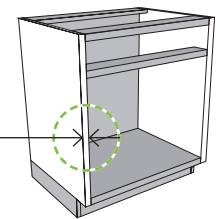

Write the dimensions and quantities you need on the measurement form.

4. Double check that you haven't missed a part. The number of parts on the form should match the number of doors and drawers you need.



What to order:

1. We will provide the correct hinges based on your end panel thickness.
2. Order new doors and drawer fronts the same size as your current ones.

We're here to make it easy. Call: 844-MY-DIY-KIT | Support@KitchenMakeover.com