



You have these conditions:


**No Existing Doors**

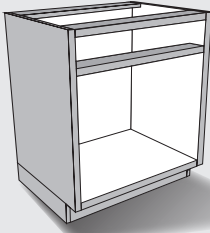

**Frameless Cabinets**

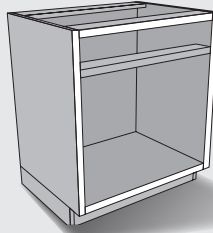

**End Panel 5/8" Thick**

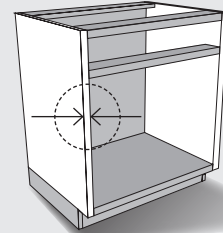

## Determine your door & drawer front sizes:

1. Download our helpful form to record your information the same way our website will ask for it. [Measurement Form](#)
2. Measure your cabinet opening to the closest 1/16" (0.0625"). Measure width first, then height.


**For openings less than 22" wide, order 1 door.**

- Add 1" to the cabinet opening width and to the opening height.

**For door openings greater than 22" wide, order 2 doors.**

- Add 1" to cabinet opening width, then divide by 2 to determine the door width.
- Add 1" to the opening height to get the door height.

Write the dimensions and quantities you need on the measurement form.

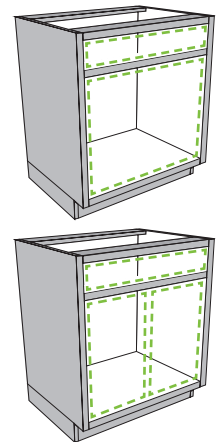

3. Double check that you haven't missed a part. The number of parts on the form should match the number of doors and drawers you need.



## What to order:

1. When asked, choose 5/8" end panel thickness so you get the right hinges.
2. Order doors and drawer fronts with the dimensions determined above.