

# INSTALLATION INSTRUCTIONS

## INSTALLATION TOOLS

Installation is easy.

Have the following items available for use:

### MATERIALS REQUIRED


- Hammer
- Electric drill/screw gun with #2 Phillips head bit
- 1/16" and 3/16" drill bits
- #2 Phillips screwdriver to adjust hinges

### SUGGESTED

- Double-sided mounting tape
- Pilot Hole Locator
- Door Pull Locator
- Wood glue, if repairing drawer boxes
- Cleaning solution (Formula 409 recommended)
- Paper towels

---

**If you have any questions,  
please call: 844-4-THE-KIT**

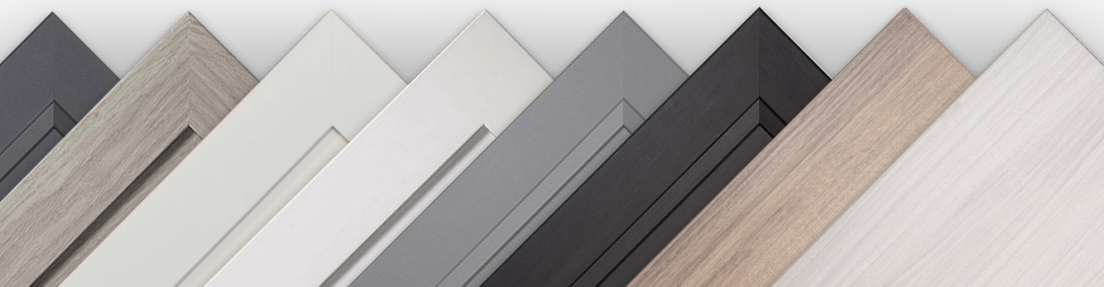

## 1 PREP YOUR OLD CABINETS

Scan QR code to watch time lapse installation video.



- A. Remove old cabinet doors and false fronts (like drawers but don't open).
- B. Remove drawer boxes (drawer fronts included). Detach drawer front from box.



**Be sure to keep track of where each drawer box is located for install.**

## 2 GET READY TO PAINT

- A. Fill holes in the front and/or side of cabinets with wood filler.



- B. Sand all areas to be painted. Old surface must be clean and dull, not shiny, for best adhesion.



### 3 PAINT

- A. Your order arrives packaged and labeled by carton.  
Paint ordered is in carton #1.
- B. Paint outside of old cabinets. You can brush, spray, or roll them – whatever you're most comfortable with. Allow last coat to completely dry before installing doors and fronts.



**We recommend at least 24 hours for the paint to dry.**

### 4 INSTALL THE DOORS

- A. Place the doors on a **CLEAN, HARD SURFACE.**

Gently tap hinges into doors with a hammer until flush with the door surface.



**Inserting hinges on a soft surface like carpet can damage doors.**

Scan QR code to watch training video for inserting hinges.




## INSTALL THE DOORS (continued)

**For FRAMED CABINETS, please follow steps B thru D.  
For FRAMELESS CABINETS, skip to step E thru J.**


**Scan QR code to watch training video for framed cabinets.**




- B.** Drill the top hinge pilot holes for hinge screws using “Framed Cabinet Pilot Hole Locator”. If applicable, start at wall to ensure alignment of all cabinet doors.

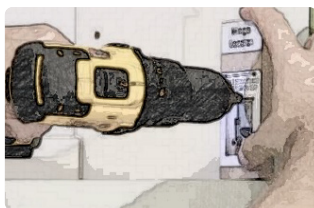

- C.** Secure top hinge first using screws from bag that says “Screw Hinges to Cabinet”. When door is properly positioned, screw lower hinge into place. Apply rubber bumpers to corners of doors, opposite of hinges.

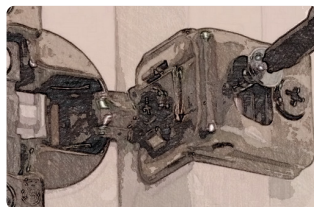

- D.** Adjust hinges to align doors making sure they close flush against cabinet. Adjustments move doors in and out and/or right and left. For up and down adjustment, loosen hinge on cabinet and slide hinge up or down.

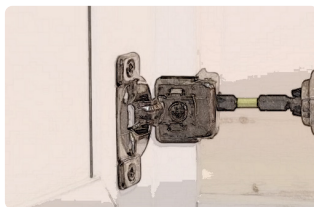


**For FRAMED CABINETS, skip to step J.**

**Scan QR code to watch training video for frameless cabinets.**



## INSTALL THE DOORS (continued)


- E. Drill the top hinge pilot holes for hinge plate screws using “Frameless Cabinet Pilot Hole Locator”. If applicable, start at a wall to ensure proper cabinet alignment.

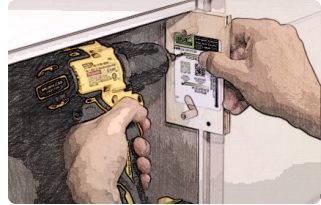


- F. Secure top hinge plate first using screws labeled “Front Screws For Frameless Hinge Plates”. Attach bottom plates to hinges on door.




- G. Clip top hinge to top hinge plate. When door is properly positioned, screw lower hinge plate into place. Apply rubber bumpers to corners of doors, opposite of hinges.

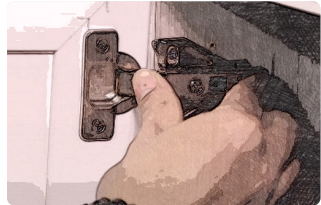

- H. Adjust hinges to align doors making sure they close flush against cabinet. Adjustments move doors in and out and/or right and left. For up and down adjustment, loosen hinge on cabinet and slide hinge up or down.

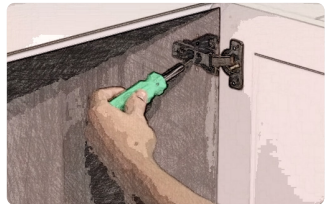

- I. Final, **VERY IMPORTANT** step. Find bag labeled “Screws for Back Hole of Frameless Hinge Plates”. Screws are required for long-term strength of hinges. Without these, doors may come loose over time. Insert one at back of plate.

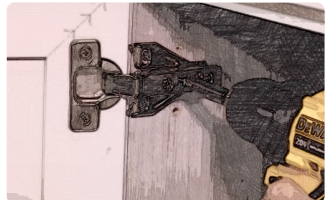

- J. Install any tilt-outs or hamper fronts.

## 5 INSTALL THE FALSE FRONTS


Scan QR code to watch training video.



- A.** Drill false front pilot holes using “Framed or Frameless Cabinet Pilot Hole Locator” for false front posts.



- B.** Use Phillips screwdriver to secure post using larger, #8x1” screw supplied, (manual screw driver is recommended for this step).

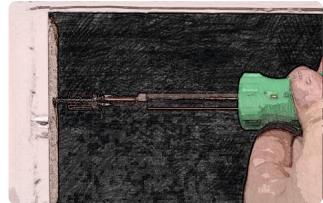

- C.** Apply double-sided tape to flat side of both false front clips and slide onto false front posts. Put bumpers behind four corners of false fronts.



- D.** Align and firmly press false front against false front clips. Remove false front by pulling straight off cabinet, (clips should remain on front). Secure clips to false front using #6x5/8” screw supplied.



- E.** Clip false front back in place.



## 5 INSTALL THE DRAWER FRONTS


Scan QR code to watch training video.



- A.** Use 3/16" bit to drill holes in drawer box to screw box to drawer front. Make sure the holes are positioned to screw into the thickest part of the drawer front, not the center panel.



- B.** Apply mounting tape to back of drawer front, remove backer.

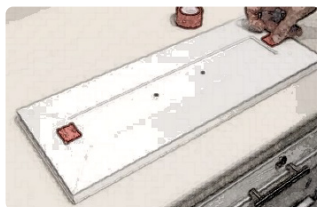

- C.** Insert drawer box in cabinet, without front attached
- D.** Align drawer front with surrounding doors and drawers. Press drawer box firmly against front. Remove drawer from cabinet, (mounting tape secures drawer front temporarily). Screw front to drawer box with washer-head screws supplied
- E.** Reinsert drawer box into cabinet.

## 6 INSTALL PULLS

Scan QR code to watch training video.



- A. Doors - use 3/16" drill bit and pull locator supplied. Place locator tightly over corner of door and drill through locator and front of door, (watch hand placement).
- B. Drawer Fronts - use 3/16" drill bit to drill through drawer box at pilot holes on drawer front. Install hardware using 1/4" screws supplied.

## FINAL STEPS

Clean up, you're done!

---

## QUESTIONS?

Contact Customer Service 844-4-THE-KIT.

